

1. Install main motor as shown, attaching it to the metal hooks welded to the crossbars. *(Note that when the motor is positioned correctly, the battery pack will be pointing towards the outer side of the bed base. See photo at left for correct alignment.)*
2. With the red tabs in the up position, slide the caps over the metal bars to secure the motor.
3. Push the tabs down to lock the motor in place.


## Head motor installation



3. Align the head motor over the brace which is welded to the metal bar nearest the main motor, as shown.
4. Insert the brass pin through the motor assembly and metal brace.
5. Lock the pin in place with the provided metal clip.
6. Align the head motor extension over the brace welded to the metal bar nearest the head of the bed, as shown.
7. Insert the brass pin through the motor assembly and metal brace.
8. Lock the pin in place with the provided metal clip.



9. Plug the cord from the head motor into the main motor as shown.
10. Plug the cord from the remote control or infrared receiver into the main motor as shown *(nearest to the battery pack)*.

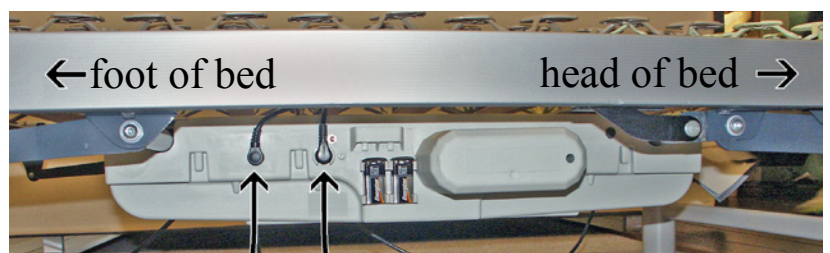

head motor plug in

handset or infrared receiver plug in